

Requirements

- A Wired Desktop or Laptop Computer
- Power Outlet

Package Contents

- 1x HPOW5CM
- 1x Power over Ethernet Adapter (PoE) w/ AC Power Adapter
- 1x RJ-45 Ethernet Cable
- 1x Wall Mounting Kit
- 2x Cable Ties for Stand/Pole Mounting
- 1x Setup CD-ROM
- 1x Quick Installation Guide (QIG)

Product Description


LED Description

WiFi Signal Strength Indicator
In Client Bridge/Repeater and WISP modes, these LEDs will show the signal strength of the remote network

LAN1 (PoE)
LED is on, (blinking), when there is an established ethernet connection to the PoE and from there into a networking device

LAN2 (PoE)
LED is on when there is an established ethernet connection to a networking device.


Power
LED is on, when the power adapter is connected to the PoE and the PoE is powered on.

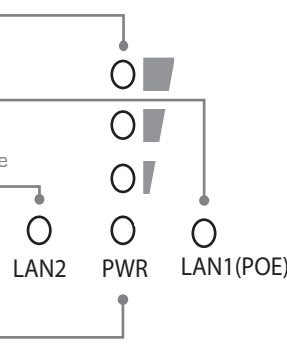

Physical Description

LAN1 (PoE)
PoE ethernet port.

LAN2
Secondary LAN ethernet port

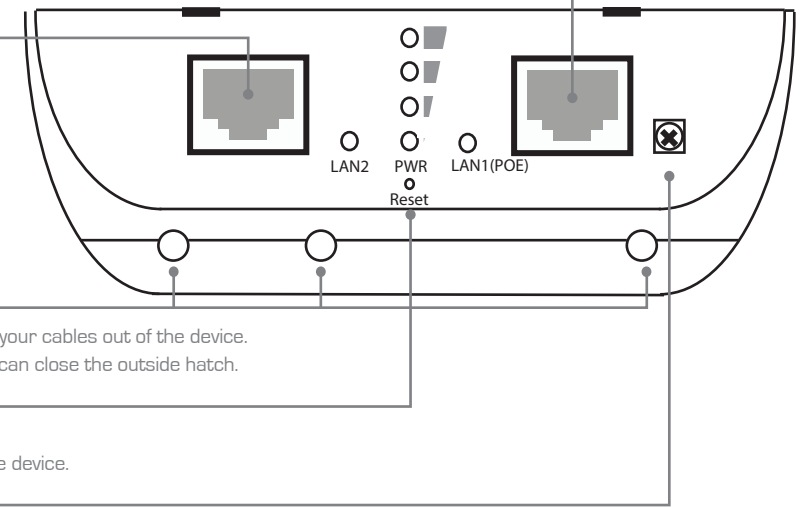



Ethernet Cable Guide Ports
These can be popped out to help guide your cables out of the device. Guide your cables through here so you can close the outside hatch.

Reset Button
Press and hold the reset button for at least 15 seconds to factory reset the device.

Grounding Connection
Grounding cable can protect this device from lightning strikes and buildup of static electricity. Grounding cable not included in the package. We suggest 16-18 AWG grounding cable.

Start Here

1 Hardware Setup

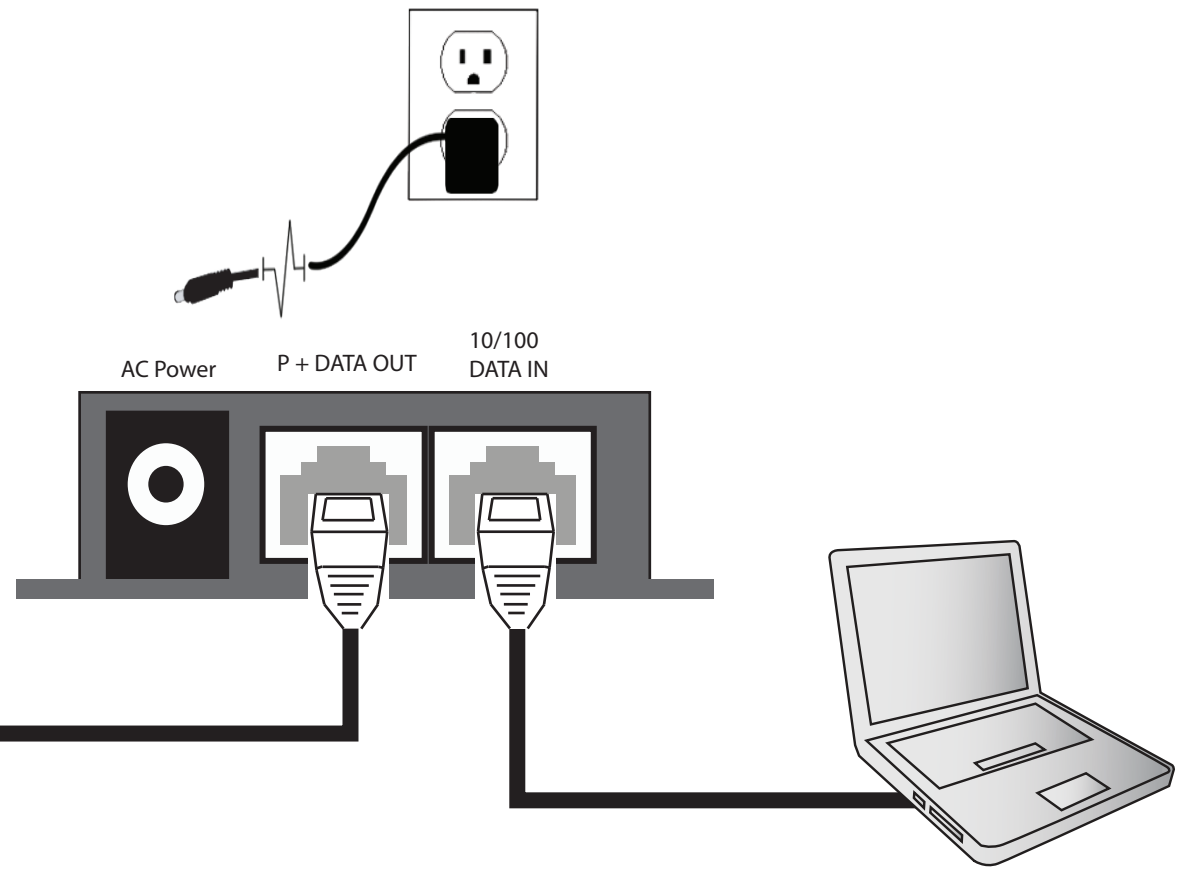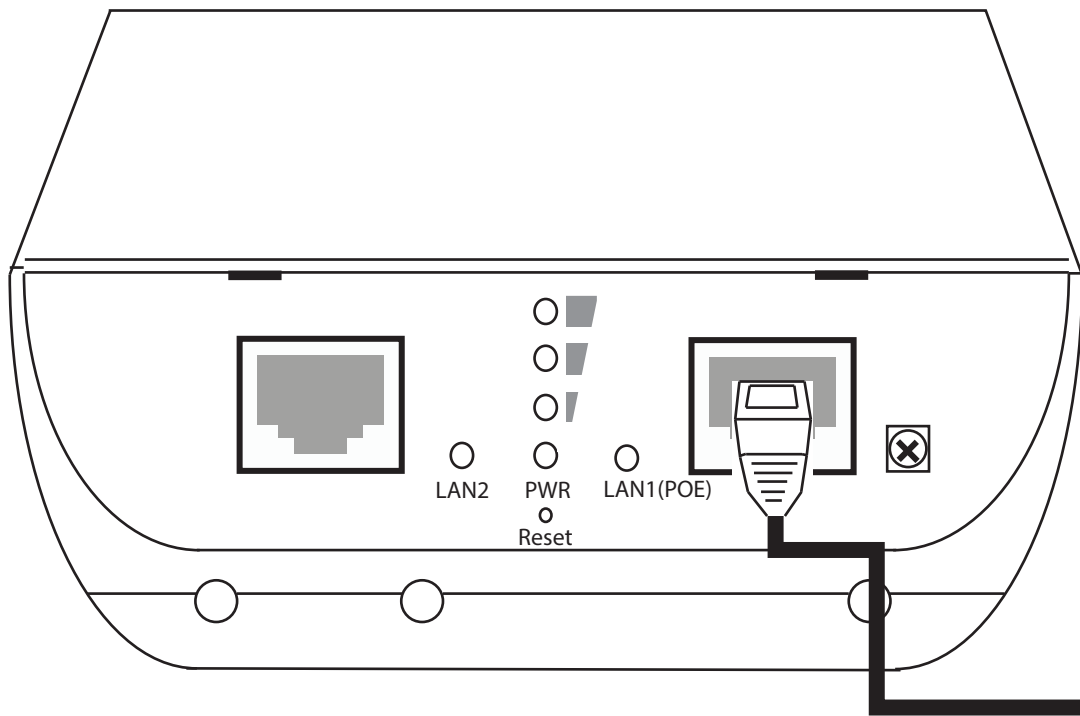


2 Configuring the HPOW5CM

The HPOW5CM must be configured via ethernet port from a Desktop or Laptop Computer. See diagram above. If your computer is Wi-Fi enabled, you'll need to turn off the Wi-Fi connection from your computer until you are done configuring the HPOW5CM

Configure the HPOW5CM with a Mac computer



- Open your System Preferences and select the "Network" option.

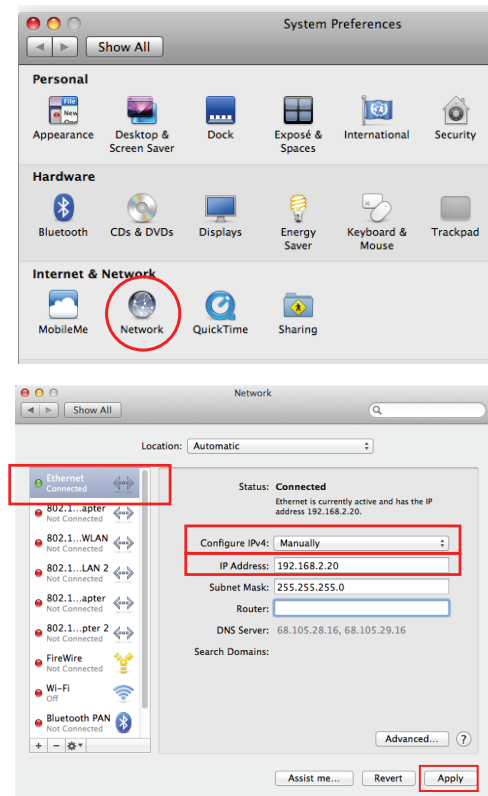



- Select the "Ethernet" option. Find the "Configure" drop down menu and select "Manually". In the IP address, enter "192.168.2.20", and select "Apply".

Configure the HPOW5CM with a Windows computer

- Go to "Start" button, then go to control panel. Go to Network and Sharing Center. On the left hand column, click on "Change Adapter Settings". Right click on "Local Area Network (Ethernet)" and choose "Properties".

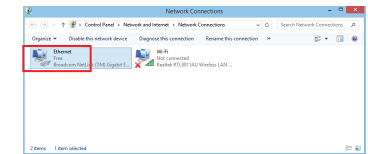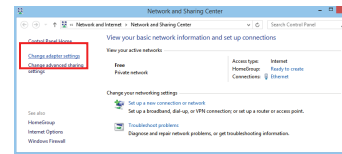

- Select "Internet Protocol Version 4 (TCP/IPv4)" and click on "Properties".

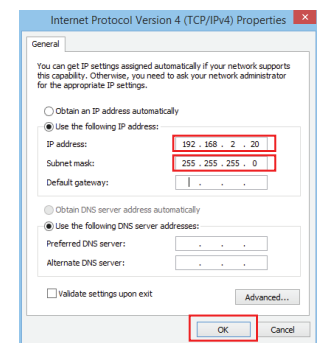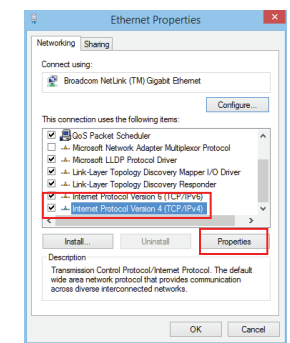


- Select the "Use the following IP address" option. In the IP address, enter "192.168.2.20", and Subnet Mask of "255.255.255.0" and select "Ok". Click "Ok" again under Ethernet Properties.

3 Login into the HPOW5CM

Using the same device, open a web browser and type in the following web address in the web address bar: <http://192.168.2.254>

Once the page loads, enter the following login information:

Login: **root**
Password: **default**
Click **Ok** to continue

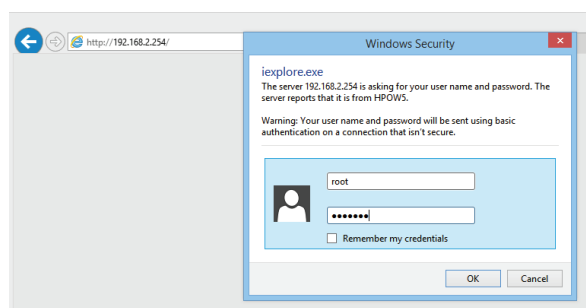

4 Choosing your Mode

You will now access the setup page. Under System, Mode Setup, select your mode. After it reboots, go to Wizard to set up the device. Refer to the Manual on the CD if you need more information on the different modes and features of this device

