

USB Serial Converter: USB and Serial Bridge

CONNECT WHEREVER YOU WANT WHENEVER YOU WANT

CAREFREE MULTIMEDIA



USB Printer Adapter: USB to Parallel Cable

The Hawking H-UC232S USB Serial Converter operates as a bridge between one USB port and a standard RS-232 Serial Port. You can easily connect the H-UC232S cable to your PC or Mac and connect it to any RS-232 device

or DB-9P Male connector such as a PDA, Scanner, Printer, etc. Installation is easy with USB Plug and Play functionality. Connect your components together in no time

SYSTEMS REQUIREMENTS:

at all!

- PC or Mac with available USB Port
- IBM Compatible Pentium-233 MHz or higher
- Windows 98+, Mac OS 9+
- 64 MB RAM or above

READY, NETWORK & GO!

It's easy to install, it's easy to use! Everyone can do it.

Step 1 - Connect the Cable

Connect the cable to your components and PC or MAC.

Step 2 - Install the Drivers

Power on your computer and insert the installation disk into your CD-ROM drive.

USB 1.1 Compliant RS-232 Serial Interface **Bus Powered** Two Year Warranty

H-UC232S

PACKAGE CONTENTS:

- **USB Serial Converter**
- Driver Installation Diskette
- Easy-to-follow User's Manual



SPECIFICATIONS:

Operating Systems:

Windows 98SE+

MAC 9+

Standard:

USB specification Revision 1.1 compliant

Installation:

Plug and Play and Hot Plug Capable

Serial Interface:

RS-232

Data Transfer Rate:

500Kbps

Power Requirement:

None

Place of Manufacture

Taiwan

HAWKING TECHNOLOGIES, INC

USA: 6A Faraday, Irvine, CA 92618 Europe: Rotterdam, The Netherlands

Fax: 949.716.6050

Sales:

Fmail: sales@hawkingtech.com Email: techsupport@hawkingtech.com

888.2023344, 949.2066900

ORDERING INFORMATION:

H-U2PS2 PS2 to USB Adapter H-U225HD 2.5" HD to USB Adapter H-UC232S Serial Port to USB Adapter

Copyright © Hawking Technologies, Inc. 2002. All rights reserved. All trademarks herein are the property of their respective owners.